

All RSI Video Technologies VISIO and X series control panels can accept up to 24 peripheral devices besides the initial programming keypad. The XL control panel can accept up to 19 peripheral devices.

The following instructions will explain how to Delete a device after initial programming has been completed.

With the display showing the date and time stamp along with the current Access Level. You must be in Access Level 4

Using the RIGHT ARROW go to ACCESS LEVEL 1 press YES and RIGHT ARROW to ACCESS LEVEL: 4. Press YES.

Display will show BADGE OR CODE. Enter the installer code followed by YES. Display will change to ACCESS LEVEL 4.

RIGHT ARROW until the display shows CONFIGURATION and press YES. The display will show BADGE OR CODE. Enter your installer code followed by YES.

Display will show GENERAL PARAMETERS. Press the LEFT ARROW until the display shows AREAS AND DEVICES. Press YES.

Display will show DEVICES. Press YES.

Display will show ADD A NEW DEVICE? Press RIGHT ARROW and to go DEVICE CONFIGURATION and press YES.

With the display showing the first device on the system use the arrow keys to find the device you would like to delete and press YES. The display will change to DELETE "DEVICE" press YES and the device will delete.

Once the deletion is completed press and hold the ESC/NO key for 5 seconds to return to the main menu.



DATE / TIME
DISARMED LVL: 1

ACCESS LEVEL: 4

ACCESS LEVEL 4

CONFIGURATION

AREAS AND DEVICES

DEVICES

DEVICE CONFIGURATION

PRESS PROGRAM BUTTON
OF DEVICE